Attention all valued customers:

As our company grows and ages, so does your equipment. With that comes time for routine maintenance to your Ultimate 1000 Lifting equipment and its additional parts. A list of routine maintenance is to follow:

Replace the Pivot Bolt every 5 YEARS

Replace Load Cell Bolt(s) Every 1 YEAR

Replace Nylon Lifting Straps every 1-3 YEARS

Replace Plastic Glidetec Body Straps every 1-3 YEARS

Check Track Installation/Anchor Points to Ensure Stability every 3 YEARS

Remember, this overhead lifting equipment handles heavy loads on a consistent basis. Below is a list of all *WARNING PRECAUTIONS* listed in our instruction manuals:

- 1. Never lift a living person with the lift.
- 2. Never lift remains more than three feet above a casket or preparation table unless they are in a locked casket.
- 3. Never lift a casket from one floor to the next without first locking the casket closed.
- 4. Black nylon straps are used to lift caskets and remains weighing over 400lbs, up to 1000lbs.
- 5. Never place black nylon casket straps under the casket. Always go over the top of the casket.
- 6. Never use the lift to lift a casket that does not have a middle hinge.
- 7. Never lift anything that is not human remains or a casket.
- 8. Never stand under the machine when there is a body or casket on it.
- 9. Never use GlideTecTM straps for bodies over 400lbs.
- 10. Never spin Ultimate 1000 Lift 360°.

You can find our **MAINTENANCE PROCEDURES** at https://mortuarylift.com/operation-and-installation-resources/ or under our resources tab on our website.

Note: This equipment is considered an overhead crane and needs to be inspected regularly

Mortuary Lift Company travels the country annually offering servicing and maintenance on our equipment.

To have us service your equipment **NOW** please call 1(800)628-8809

