


RC-013 “Brick Style” Remote Programming Instruction

Step 1. Remove Back Cover from Remote Control

Step 2. Remove Cover from Board inside the Ultimate 1000 lift.


Step 3. Set Address Switch inside the remote control, at least 4 of the tabs should be in the up position. These tabs can be set in any orientation as long as at least for are in the up position.

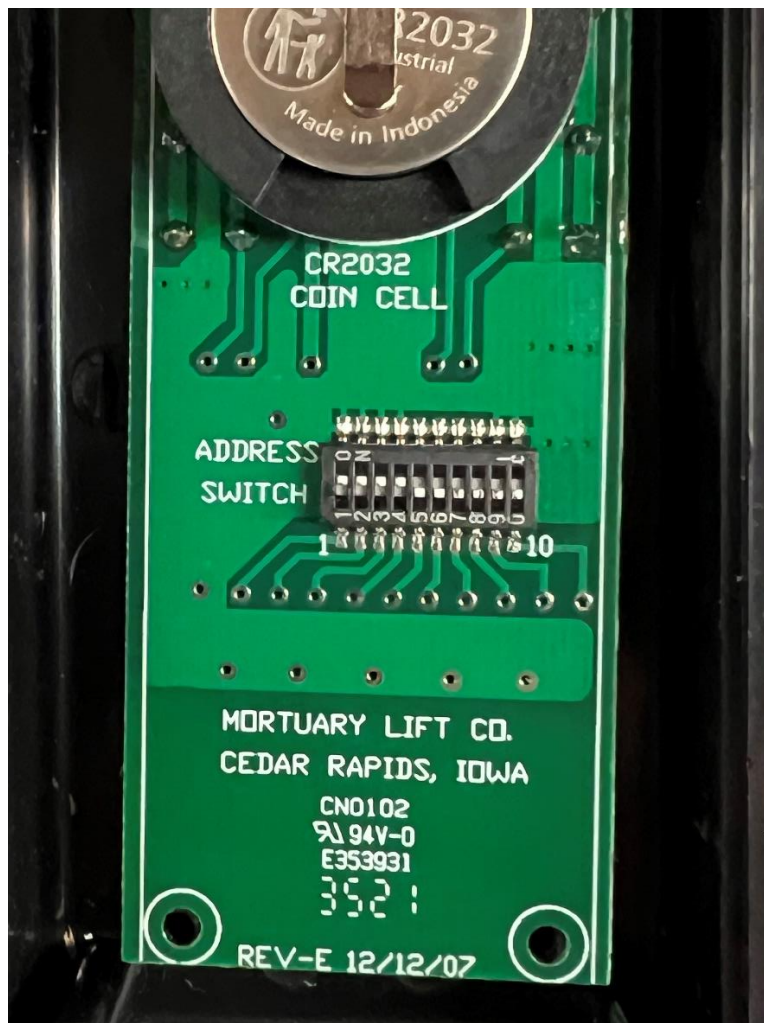

Step 4. Set the tabs on the receiver board to match the orientation on the remote.



Step 5. Double check that the orientation of tabs match on both remote and receiver board.

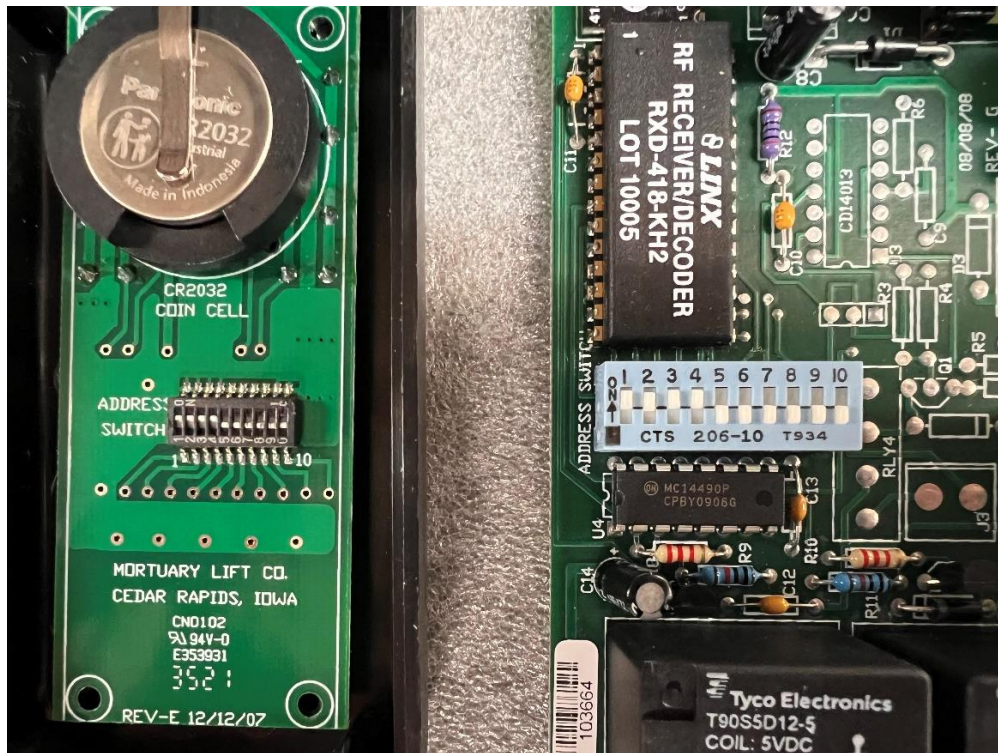

Step 6. Test Remote to ensure it has connected with the receiver board.

Step 7. Replace covers on both remote and receiver board.

