


THE ULTIMATE 1000 LIFT™

I-Beam Festooning Installation

MORTUARY LIFT™ COMPANY

A L i f t i n g E x p e r i e n c e™

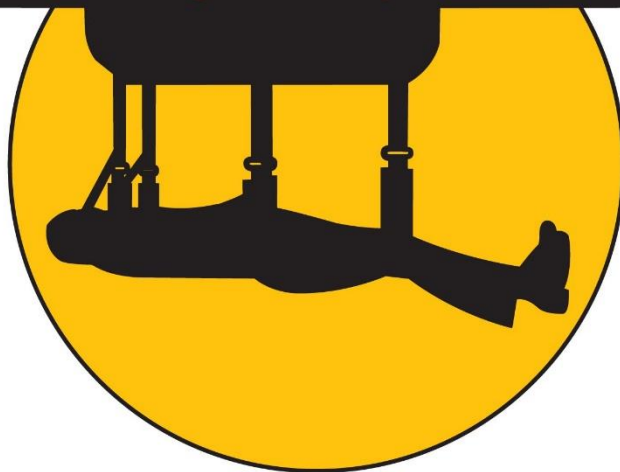

THE ULTIMATE 1000 LIFT™

127 Cottage Grove Avenue S.E.

Cedar Rapids, Iowa 52403

800-628-8809 • 319-364-4910

www.mortuarylift.com

I – Beam Festooning Installation Manual



1.) Attach the long angle bracket on the I-Beam that is closest to the electric outlet. Use the provided clamps in the first and last holes on the bracket to secure the bracket to the beam. The bracket with the top screw must be placed in the hole closest to the trolley.



2.) Run the provided wire through the top hold on the bracket, wrap it around to form a loop and then secure the wire using a wire crimp.



3.) Run the power cable through the cable clamps on the festoon gliders and then hang your gliders on the wire.

The gliders will stack inside of the long angle bracket so they must be placed where the lift will be parked



4.) Attach the smaller bracket on the other side of the beam.


5.) Make another loop in the wire on this end and secure it with a wire crimp. Attach the loop you've created to the hook on the turn buckle.

6.) Tighten the turnbuckle until the wire is tight.

Rev 7/28/2021

MORTUARY LIFT™ COMPANY

A L i f t i n g E x p e r i e n c e ™

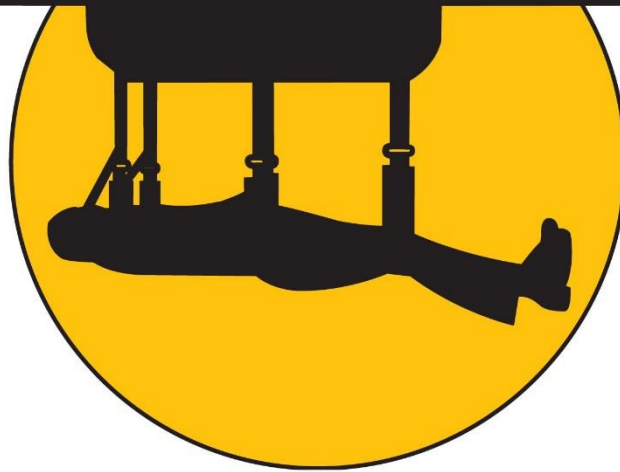

THE ULTIMATE 1000 LIFT™

127 Cottage Grove Avenue S.E.

Cedar Rapids, Iowa 52403

800-628-8809 • 319-364-4910

www.mortuarylift.com




Wire



Turnbuckle



Festoon Gliders

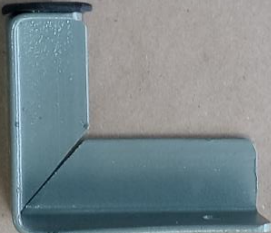

Short Angle Bracket



Long Angle Bracket



Clamps