


THE ULTIMATE 1000 LIFT™

Strap Replacement Instructions

MORTUARY LIFT™ COMPANY

A L i f t i n g E x p e r i e n c e ™

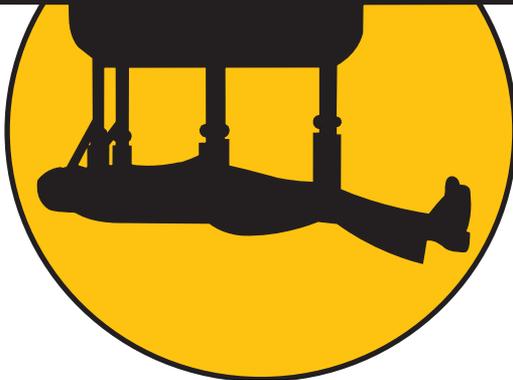


127 Cottage Grove Avenue S.E.
Cedar Rapids, Iowa 52403
800-628-8809 • 319-364-4910
www.mortuarylift.com

THE ULTIMATE 1000 LIFT™

STRAP REPLACEMENT INSTRUCTIONS

FAILURE TO READ, UNDERSTAND AND FOLLOW THESE INSTRUCTIONS MAY RESULT IN SEVERE INJURY OR DEATH TO YOURSELF OR OTHERS.

1. Remove cover by unscrewing four bolts that attach it to the metal base of the machine. The molded plastic cover weighs approximately 5 lbs. and should come completely off.
[Place cover and bolts in a safe spot.]
2. Turn machine on and run all six straps completely down until you reach the end of the strap where it attaches to the pulley wheel [spool].
3. Remove the cotter pins from the pulley wheel by straightening the ends, then remove if from the spool. Discard old cotter pins.
Replacement cotter pins have been provided.
4. Remove and discard the sheer pin that holds the straps to the pulleywheel and shafting. New sheer pins have been provided.
5. All straps come from Mortuary Lift Company rolled exactly the same way. If all straps are attached exactly the same way, all hooks and buckles will be facing inward so they don't snag on casket interiors.
6. In order to face all hooks and buckles inward, weave strap between the pulley wheel and the metal base of the machine (make sure that the roll of the strap is facing inward - towards the inside of the machine). *See diagram on page 3.*

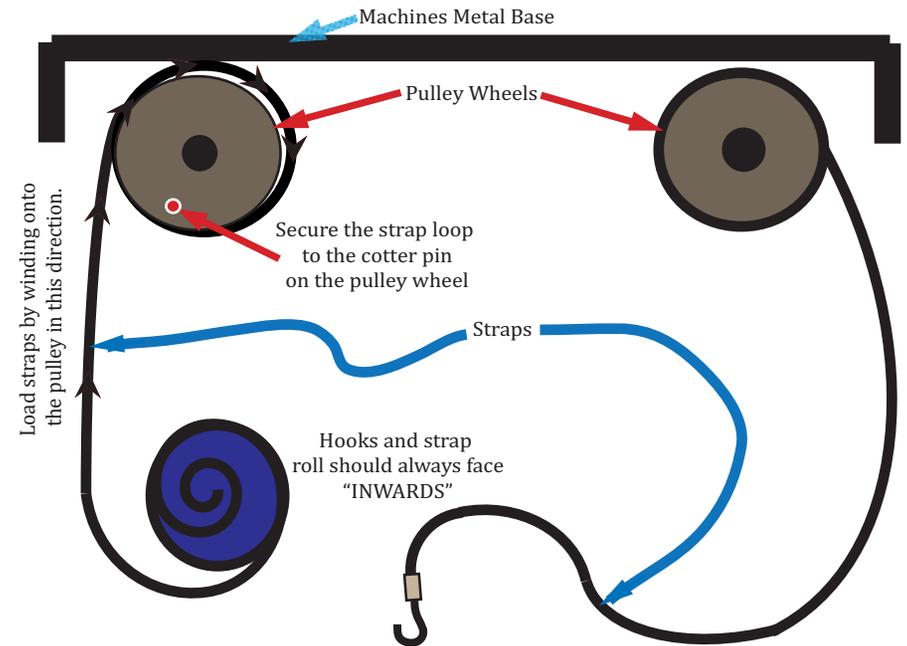

7. Place the new sheer pin through the grommet on the strap, and into the hole on the pulley wheel and the shafting. Then slide the new cotter pin through the side of the pulley, across the top of the sheer pin and out through the other hole of the pulley wheel. With a wrench, bend open the end of the cotter pin.
8. Once all the straps have been attached to the pulley wheels with the sheer pin and cotter pins, turn on the machine and roll all the straps up at once. Make sure the straps stay on each pulley and do not twist.
9. Replace the Ultimate 1000 Lift cover.

ALWAYS INSPECT YOUR STRAPS

To insure that our products remain in good condition, make sure you regularly inspect your straps for excessive wear or damage.

Remove straps from service if any of the following damage is visible.

Never attempt to make a temporary strap repair.

1. Excessive abrasive wear.
2. Cuts, tears, holes, snags, or embedded particles.
3. Broken or missing stitches in load bearing splices.
4. Melted or charred spots.
5. Damaged eyes and/or damaged or deformed fittings.
6. Knots in any part of the straps.
7. Any other visible damage which causes doubt as to strength and safety.
8. Hooks or buckles are cracked or damaged in any way.

WARNING

Failure to read, understand, or follow these procedures precisely may result in damage to your machine, serious injury or even death.

MORTUARY LIFT™ COMPANY

A Lifting Experience...



THE ULTIMATE 1000 LIFT™

127 Cottage Grove Avenue S.E.
Cedar Rapids, Iowa 52403
800-628-8809 • 319-364-4910
www.mortuarylift.com